



Macchina


EFM



Sezione

1

EFM\_part1

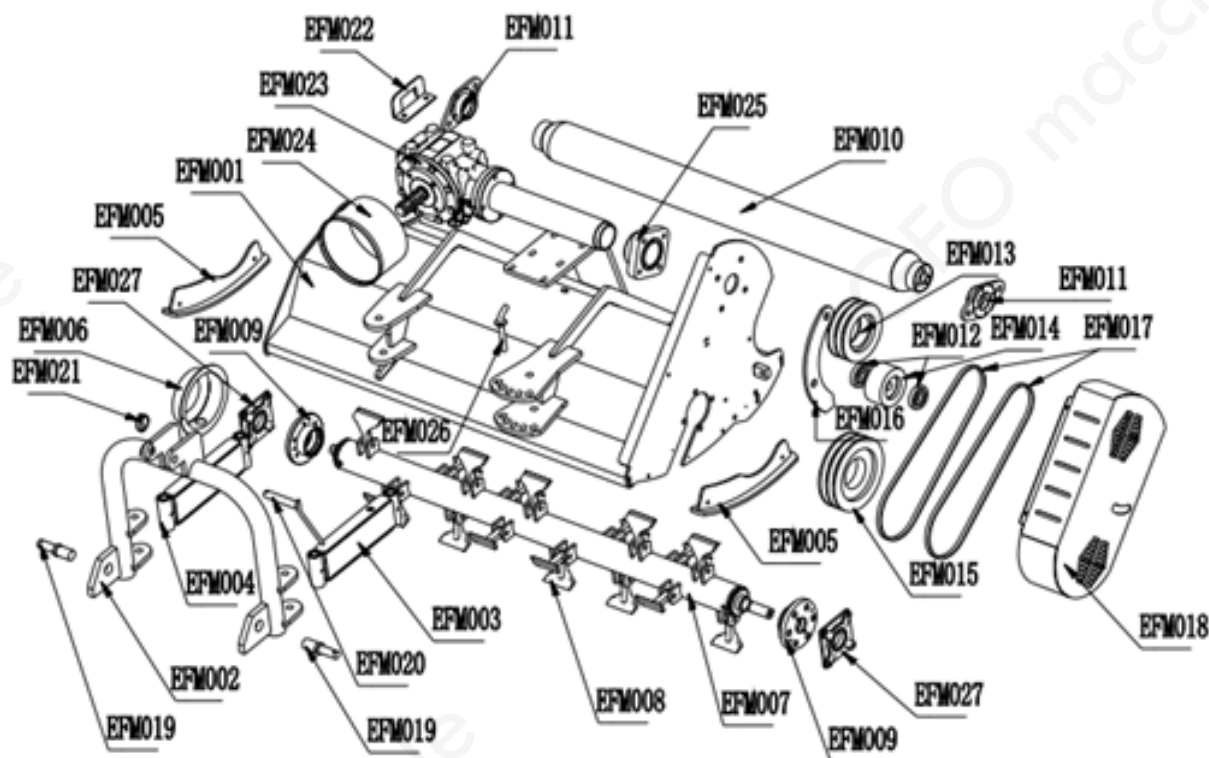

SerNo	PartNo	Description	Quantity
1	EFM001	Mower Body	1
2	EFM002	3 point	1
3	EFM003	Right Point Arm	1
4	EFM004	Lift Point Arm	1
5	EFM005	Skider	2
6	EFM006	Bearning Conver	1
7	EFM007	Hammer Alxe 89mm DIA	1
8	EFM008	Blade	
9	EFM009	AXLE Protect	2

10	EFM010	Roller	1
11	EFM011	Roller bearing UCFL204	2
12	EFM012	Bearing 6004E-RZ	2
13	EFM013	Top Pulley DIA:170X120	1
14	EFM014	Adjustable pulley	1
15	EFM015	Bottom Pulley DIA:120X60	1
16	EFM016	Adjustable bar	1
17	EFM017	Belt 17X1041L	2
18	EFM018	Conver	1
19	EFM019	Bottom pins CAT I	2
20	EFM020	top pins CAT I	4
21	EFM021	R pins	3
22	EFM022	Hooker	1
23	EFM023	Gearbox with shaft	1
24	EFM024	Gearbox Conver	1
25	EFM025	Bearing UCF205	1
26	EFM026	Lock pin	1
27	EFM027	Hammer axle Bearing UCFC207	2